

Comfort Digisystem User Manual



Microphone DM80



English



User Manual

Table of Contents	Page
Introduction to the Comfort Digisystem	3
Presenting the Microphone DM80	3
Functions of the Microphone DM80	4
Getting Started	5
First Time Use	6
Menu	7
More Functions	14
Radio Range and Channels	17
Attached Accessories	18
Other original Accessories	18
Troubleshooting	19
Service and Warranty	20
Technical Data	20
Important Safety Instructions	21

Introduction to the Comfort Digisystem

Thank you for choosing Comfort Digisystem.

The products are easy to use, whether you use a hearing aid or not.

Before using the product, please read this User Manual carefully.

Using the Microphone DM80 transmitter, the signal is transferred digitally, resulting in excellent, clear sound.

Comfort Digisystem is fitted with SecureStream Technology - a type of digital technology allowing eavesdrop-secure radio transfer in real time.


Presenting the Microphone DM80

A microphone that not only serves as a conference micro-phone, but can also be connected to telephones. The DM80 can be connected via Bluetooth to a mobile phone/portable phone, and the microphone can be connected via a cable to a telephone using a 2.5 mm headset socket.

The DM80's built-in microphones are used to speak into, while incoming sound from the telephone is transmitted in a wireless, interception-secure link to any Digisystem receiver.

The DM80 has both an omnidirectional microphone and a directional microphone for use in environments with more disruptive background noise. The large, practical answering button can be used to answer calls with a Bluetooth connection, even if you have your phone in your pocket, for example.

Functions of the Microphone DM80

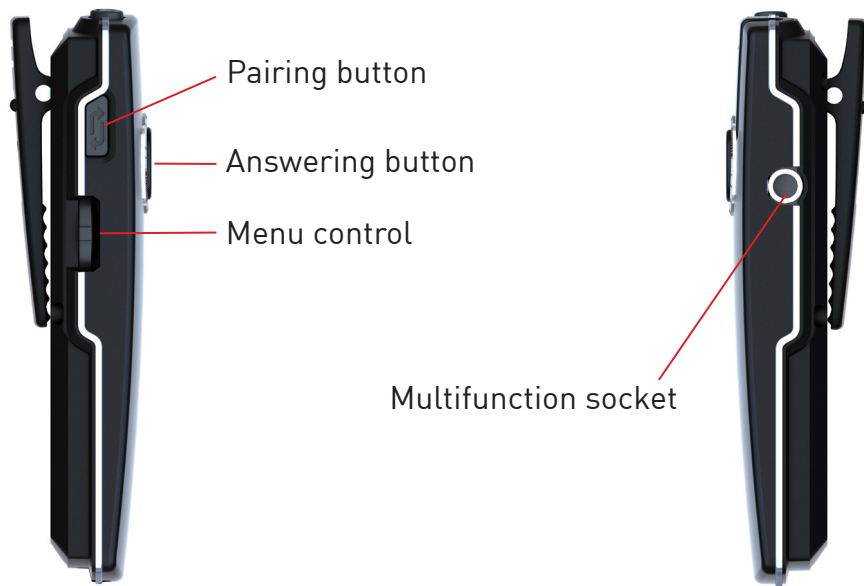

Getting Started

Charging

The Microphone DM80 is chargeable. Charge the DM80 at least two hours before you use it for the first time. An empty battery is fully charged within two hours.

During charging, the function indicator shows red and a lightning bolt appears through the battery symbol in the display. Once the battery symbol is filled with green columns and the function indicator shows green, the unit is fully charged and switches to automatic float charging.

A fully charged battery has an operating time for up to seven hours in normal microphone mode, approx four hours' call time via Bluetooth or 48 hours in standby mode with Bluetooth transmission only. Battery lifetime is up to five years. You must not change the battery yourself; please contact your point of purchase.



Connecting a charger to the Microphone DM80

Please note:
**Only use the charger
supplied by Comfort Audio AB.**

First Time Use

The Microphone DM80 is a microphone for closer range. It works best within approx. 30 cm.

Switch on the transmitter by pressing the On/Off button for around two seconds. Function indicator ON.

Connect the clip-on-microphone (or other original microphone) or headset cable if desired.

The clip-on-microphone can be attached to your clothes with its clip.

The DM80 can be secured using the clip or hung around the neck using the necklace provided (two lengths).

Microphone positions

Two settings are possible; omni-directional (press menu control down and choose yes) and zoom (press menu control up and choose yes).

Zoom microphone mode is useful in environments with disruptive background noise.

- Zoom



- Omni



Please note: Omni mode is automatically activated during charging. However, when you make a call when zoom mode is preselected, this mode will be activated.

Other functions are explained later in this manual.


WARNING!

The necklace should not be used if there is a risk of getting stuck, e.g. in a machine or other objects.

Menu

Menu control

Three different selections can be made:

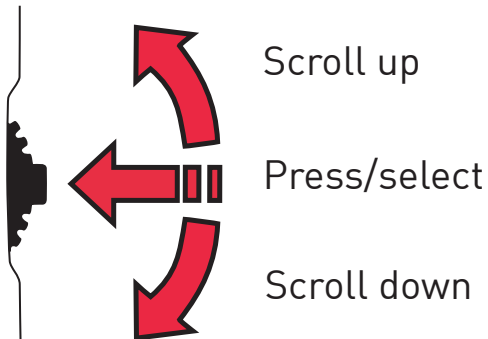

To access the menu, press the menu control:

Back

Communication

- ↳ *Channel*
- ↳ *Pair*
- ↳ *Bluetooth*
- ↳ *Phone*

Inputs

- ↳ *Extern mic*
- ↳ *Line in*
- ↳ *Phone*
- ↳ *Mic gain*
- ↳ *Line gain*

Settings

- ↳ *PIN code*
- ↳ *Charge*
- ↳ *Language*
- ↳ *Name*
- ↳ *Func. indicator*
- ↳ *Factory Reset*

Key lock

About

Back (relates to both the main menu and submenus)

Here you can choose to return to the menu and to the main display

Communication

Channel

To use the receiver and the transmitter together, they must be set to the same channel. The transmitter and receiver are set to the default channel by the manufacturer.

This does not apply to units with both sender and receiver. In this case the transmitter/receiver are adjusted as described in chapter *Radio range and Channels*.

Change channel:

1. Choose **Channel** in the menu.
2. Choose transmitter or receiver (this applies only to units with both transmitter and receiver).
3. Select a new channel using the menu control.

Channel information is also given when the units are paired.

Channels 1, 2 and 3 are free channels in most European countries that do not require a licence. Under **Extended** more channels can be selected, but these usually require a licence – see the section *Radio Range and Channels*.

FFC (Free Frequency Check) indicates in green the suitable frequencies for the specific environment. **Please note!** Switch off your other Digisystem transmitters for correct result.

Pair

To use a receiver and transmitter together, they must be paired. All transmitters and receivers are default paired at the factory and will work together. **NB!** To prevent eavesdropping, a new code key must be generated and transmitted between the units by pairing.

If the message **Channel combination not possible** appears during pairing, this indicates that the selected frequency is outside the frequency range within which the unit can transmit/receive. Check possible channels in the **Communication - Channel** menu.

Transmitting/receiving of pairing information along with a new code can be performed from any Comfort Digisystem unit with a display.

To pair units without a display, see sections *Pairing (via pairing button)* for more information. Pairing information or a new code key can be received by several activated units.

Pairing (via menu)

1. Choose **Communication - Pair**
2. Select **Receive info** on one unit. **Ready to receive pairing info** is shown in the display.
3. Select **New code** on the other unit; select **Yes**.
4. **Generate new code and send info?** is shown in the display. Select **Yes** (Now both the channel and the coding information have been sent, and sound transfer is eavesdrop-secure).
5. To pair another unit into your coded system, select **Send info** instead on one of your paired units.

Pairing (via pairing button)

(The only way of pairing units without a display, with the pairing button)

You can activate the Pairing function via the pairing button.

1. One brief press of the button opens the *Pairing* menu.
2. Two brief presses activate the **Send info** function.
3. One long press activates the **Receive info** function.

Units with both transmitters and receivers built in

Comfort Digisystem units with both transmitters and receivers built-in can be paired separately.

When opening the pairing menu, choose the concerning unit (transmitter/receiver). In units with both transmitters and receivers, the pairing button controls the transmitter.

The transmitter and receiver are paired separately in these units. The code key is always the same for the transmitter and the receiver when these are built-in in the same unit.

The easiest way to get the same code key in the whole Digisystem is to generate a new code key from the combined unit; in that way the built-in receiver gets the same code as the rest of the system.

Bluetooth

Here you can activate Bluetooth to be able to pair the Microphone DM80 with a telephone or mobile.

For detailed user information, see chapter *More Functions - Bluetooth*.

Telephone

Under the **Telephone** menu you can configure the DM80 to function as a telephone headset.

Connect the DM80 to the telephone's multifunction socket via the headset cable supplied.

Please note: When the headset cable is connected to the DM80, the built-in microphone is switched off and only works when a phone call is made.

To activate the telephone function, enter the menu under **Communication - Phone - Enable** (Press shortly the menu control; a green tick shows that the telephone function was activated and a small telephone shows in the down left corner of the main display).

Use your telephone as usual; the voice of the person you are talking to is transferred via the cable to the DM80; from there it is sent wirelessly to your Digisystem receiver.

- *In level* adjusts the level of incoming sound level for telephony (not BT). This level can also be adjusted using the menu control when the headset cable is connected. The change of volume is shown on the display.
- *Out level* adjusts the level of outgoing sound level for telephony (not BT).
- *Mic mode*: here you can preset the desired microphone mode for telephony (not BT) (default setting is zoom).

Inputs

Here you can select what the multifunction socket is to be used for.

- *External Mic* (for external microphone, e.g. clip-on microphone)
- *Line in* (for, e.g., a TV or computer cable)
- *Telephone* activates the socket on the DM80 for use as a headset. Same function as *Activate* in the *Communication - Telephone* menu.

The level of the External mic or Line in can also be adjusted in this menu.

Settings

PIN code

Here you can turn the PIN code function on and off (selected functions lock). Under the menu item **Change PIN** you can create your own PIN code. Under the menu item **Lock Select**, you can select different types of menu locks:

- *Mode: Locks all functions in the "Function button" menu (can be combined with the "Pairing" menu item)*
- *Pair: Locks all pairing functions in the unit, as well as the pairing button*
- *All menus: Locks all menus*
- *Hide PIN entry: this selection is only available when the lock select **All menus** is activated. When the PIN-code is enabled, it is only possible to unlock the menu within 3 seconds after starting the unit, by pressing the menu control.*

The PIN code is needed to be able to unlock selected functions when PIN code has been activated.

If you forget your PIN code, please contact your point of purchase to unlock the unit.

Charge

Here you can activate the **Auto Power Off** function to shut down the unit automatically during charging. If **Auto restart** is activated, the unit will start automatically when the charger is disconnected or loses power.

Language

Here you can select the menu language.

Name

Here the text to be displayed is selected. Choose symbols with the menu control. Select ✓ to save and ✗ to close without saving. To move the cursor during editing, use the symbols > and <.

Func. indicator

Here you can enable or disable the function indicator. This function does not affect charging and pairing status.

Factory Reset

Resets the unit to its original settings and erases all pairing information. To obtain security against eavesdropping, a new code key must be generated or received from another unit in existing coded system.

Key lock

Here you can activate the key lock and thereby lock all buttons. Once the key lock has been activated, **Unlock keys?** appears in the display. Select **Yes** to unlock.

About

Here you find software information.

More Functions

Function indicator (LED)

The function indicator shows the unit's status depending on its setting.

Omni mode = Flashes green once every three seconds

Zoom mode = Flashes green twice every three seconds

When the battery level gets low, the indicator flashes red for the selected sound registration mode (check the battery status on the display).

During charging the indicator shows red. When the unit is fully charged, the green indicator is lit. The indicator stays red even when the battery is fully charged, if the unit is On during charge.

Once the unit has been set to receive pairing information, the indicator flashes green quickly.

When receiving pairing information, the indicator shows green for three seconds.

When sending pairing information, the indicator flashes red five times.

When the pairing mode for Bluetooth has been activated, the indicator shows blue.


When a Bluetooth telephone has been successfully connected, the indicator flashes blue five times.

During an ongoing telephone call, the indicator flashes blue every second second.

When **Clear settings** is selected, the indicator flashes blue ten times.

Bluetooth™

The Microphone DM80 can be connected to two Bluetooth telephones at the same time. During a telephone call the DM80 is used as a hands-free that receives the sound and transfers it on to the call partner. The sound from the call partner's telephone is sent from the DM80 to a paired Digisystem receiver.

When Bluetooth is activated in the menu, the Bluetooth symbol is shown in the display . If only one telephone has been paired (and connected) with the unit, the figure 1 appears at the Bluetooth symbol in the display. If two telephones have been paired (and connected) the figure 2 appears instead.

Some DECT telephones are only connected during incoming or outgoing calls. In such cases, the unit can also display a 1, even if a mobile and a DECT telephone have been paired with the unit.

The DM80 supports both headset and hands-free profiles for Bluetooth. The profile is chosen automatically during pairing.

Application - Bluetooth™

Pairing with telephones:

To pair the unit with telephones, see the section *Communication*.

Activate Bluetooth:

Enter the menu **Communication - Bluetooth - Enable**

Bluetooth menu:

When **BT only** is selected, the transmitter is active only when the telephone call is connected via Bluetooth or a headset cable is connected and activated.

Pair Mobile (Communication - Bluetooth - Pair BT- Pair Mobile) (code 1234) is used to pair a mobile with the DM80.

Pair Phone (Communication - Bluetooth - Pair BT- Pair Phone) (code 0000) is used to pair a landline-based, wireless (DECT) or mobile phone with the DM80.

Select **Clear settings (Communication - Bluetooth - Pair BT- Clear settings)** to clear all information about paired units.

Please note: After this the Bluetooth units have to be paired again (so that Bluetooth can work).

You can use **Mix level** to select how loud your own voice is during a phone call. Under **Mic mode** in the **Communication - Bluetooth** menu you can preset the desired microphone mode for Bluetooth communication.

Answer an incoming call:

Press the answering button briefly (around 1/2 second), or answer with the telephone.

End a call:

Press the answering button briefly (around 1/2 second), or end the call with the telephone.

Make a call:

When you make a call, the sound is automatically transferred via the relevant Bluetooth connection (depending on the telephone's settings) to the DM80.

One of the Bluetooth connections (telephone, code 0000) has priority. This means that the voice dialling and re-dialling functions only work in this telephone if two telephones are connected.

- Voice dialling is activated by briefly pressing (approx. 1/2 second) the answering button.
- Re-dialling is activated by pressing the answering button approx. two seconds.

Microphone position:

When making a call Bluetooth, microphone mode can be selected in the **Communication - Bluetooth - Mic mode** menu.

Volume control:

During a telephone call, the volume can be adjusted by using the menu control on the long side of the unit (this adjusts the telephone's volume control). The display shows the current volume.

Some mobiles require further adjustments to obtain sufficiently loud sound. For example, increase the level manually in the media player's equalizer (SonyEricsson).

Please note: It is not possible to initiate a Bluetooth call (activate voice dialling or re-dialling) using the answering button at the same time as **Telephone** is activated and the headset cable is connected to the DM80. The reason for this is that it must not be possible for Bluetooth calls to be activated by mistake during an ongoing phone call. It is still possible, however, to respond to incoming Bluetooth calls in the usual way.

When using land line/cordless and mobile phones at the same time

On some land line/cordless telephones the Bluetooth connection is not active if no call is being made. This can cause a time delay before Bluetooth is connected for an incoming call. In certain cases the time delay can be avoided by pairing a cordless telephone in the “Pair Mobile” profile, but this can cause problems with initiating outgoing calls from the land line/cordless telephone. For more information, see “More Functions”.

Radio Range and Channels

The transmitter and receiver have built-in antennas. The radio range between the units is around 30 metres. This may however vary depending on the particular environment you are in. Like all radio systems, Comfort Digisystem communicates on specific channels. If you use two transmitters on the same channel or a neighbouring one, there may be interference. Other electronic equipment can also interfere with radio transmissions.

In most European countries, channels 1-3 (863.250 - 864.750 MHz) may be used for hearing products. However, you should always check with the frequency assignment authority in your own country as to which channels are free and which require a licence.

In addition to channels 1-3, under **Extended** there are bands A-F, which require a licence in most European countries:

- B 854 - 863 MHz
- E 833 - 854 MHz
- F 865 - 872 MHz

Attached Accessories

Neck pendant

Two different lengths.

Headset cable

For connection to telephones with 2.5 mm headset sockets.

Clip-on microphone

Charger

Split cable for charging

Audio cables

Car charger

The car charger is designed for cars with a 12 volt (-) earthed electrical system. The charger has short-circuit and automatic overload protection. Disconnect the charger from the socket after use.

Other original Accessories

Boom microphone

Headset microphone.

Earworn microphone

A microphone that is attached around the ear.

Charging stand

For other accessories, please visit our website,
www.comfortaudio.com

Troubleshooting

The transmitter and receiver do not start

Charge the transmitter and receiver. Remember to press the On/Off button down for 2 seconds to switch the unit on. Check that the charger is connected to the plug socket.

Poor speech intelligibility

The distance between the transmitter and the receiver may be too long. The range is around 30 metres. The distance between the microphone and the person who is talking may also be too long; move the microphone nearer to the person talking. Try to change channel/environment.

Poor range and interference

In some environments involving, e.g., concrete, iron or sheet metal structures, the range may be reduced. There may also be equipment nearby causing interference. Change channel.

No sound

Check that the transmitter and receiver are set to the same channel.

Loud hissing noise (no sound transfer)

Check that the units are paired.

The unit will not start during charging

Disconnect the charger. Choose **Settings - Charge - Auto power off** in the menu.

For more detailed troubleshooting,
visit our website at www.comfortaudio.com

Service and Warranty

Comfort Audio AB provides a comprehensive warranty for two years as from the date of delivery. This covers all defects of manufacture and materials. Defects caused by careless handling or intervention inside the product or its accessories are not covered by the warranty.

Under normal use, battery lifetime is up to five years.
Contact your point of purchase once it is time to change the battery.

You are always welcome to contact us at Comfort Audio if you have any questions.

Technical Data

Type of transmitter:	SST - SecureStream Technology
Range:	Approx. 30 m
Dimensions:	84 x 39 x 14 mm
Weight:	45 g
Frequency range:	832 - 872 MHz
Antenna:	Built-in
Operating time:	Up to seven hours in normal microphone mode, approx four hours' call time via Bluetooth or 48 hours in standby mode with Bluetooth transmission only.
Battery:	Chargeable Li-Polymer
Charging time:	Approx. two hours
Microphones:	Built-in, zoom and omnidirectional
Input/output:	Line in / TV microphone / headset cable



Important Safety Instructions - Read these before using your product

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not use near any heat sources such as radiators heat registers stoves, or other apparatus (including amplifiers) that produce heat.
- 8) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet consult an electrician for replacement of the obsolete outlet. (Only when using polarized plug)
- 9) Protect the power cord from being walked on or pinched particularly at plugs convenience receptacles. and the point where they exit from the apparatus.
- 10) Only use attachments/accessories specified by Comfort Audio AB.
- 11) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way such as power-supply cord or plug is damaged liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally or has been dropped.
- 13) Start listening at a low volume.

- 14) Too high a volume can seriously damage your hearing.
- 15) Don't disassemble the product.
- 16) Should the product break open because of damage, service should only be done by qualified service personnel.
- 17) Never use a transmitter or receiver set to a non-permitted frequency. Check with the frequency authority in the country where the equipment is to be used.
- 18) The product contains sensitive electronic equipment and must be handled carefully.
- 19) Never charge product in closed, unaired spaces such as handbags, cases or other closed storage bags.
- 20) Only use batteries and power supply specified by Comfort Audio AB.
- 21) You must not change the battery yourself; please contact your point of purchase.
- 22) **CAUTION!** Danger of explosion if battery is incorrectly replaced.
- 23) The product shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24) Products include radio transmitters. Do not use products where it is not allowed to use electronic equipment, e.g. on airplanes.

Subject to change



Manufactured by:

Comfort Audio AB

Box 154, SE-301 05 Halmstad, Sweden
Tel. +46 (0)35 260 16 00 Fax +46 (0)35 260 16 50
info@comfortaudio.com www.comfortaudio.com